


Connect both wires to the terminal on the Air Ride Control Module per the module wiring instructions.

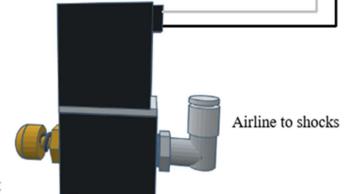

Dump speed control

Used to adjust the rate at which the bike drops, clockwise to drop slower, counterclock wise for a faster drop

Mounting is at the discretion of the installer. We typically mount with double sided tape to the ABS in a way that the speed control is accessible.

Installing air ride and/or air ride components requires the installer to check clearances of all components throughout the entire travel of the air shocks, failure do so could cause component damage which is not covered under warranty. If you have a clearance issue call or email for a solution before you ride.