




## Dump Valve

Black wire will connect to the black wire on the harness

White wire connects to the white wire on the harness (when a white wire is present) If no white wire is present it will connect to the down side of the operating switch

Dump speed control

Used to adjust the rate at which the bike drops, clockwise to drop slower, counterclockwise for a faster drop

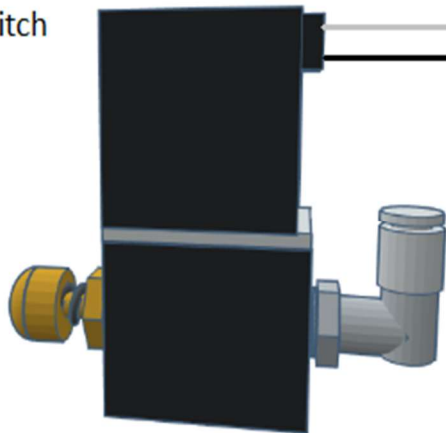

Airline to shocks

Mounting is at the discretion of the installer. We typically mount with double sided tape to the ABS in a way that the speed control is accessible

Installing air ride and/or air ride components requires the installer to check clearances of all components throughout the entire travel of the air shocks, failure to do so could cause component damage which is not covered under warranty. If you have a clearance issue call or email for a solution before you ride.