





## Front Air Fill/Dump Valve

Note: Empty all air out of the shocks before starting this procedure.

1. Connect the provided 1/4" tee to the existing 1/4" airline between the tank and compressor, then connect 1/4" airline to the fill valve.
2. Connect the provided 5/32" tee to the fitting between the fill valve and dump valve and each fork cap.

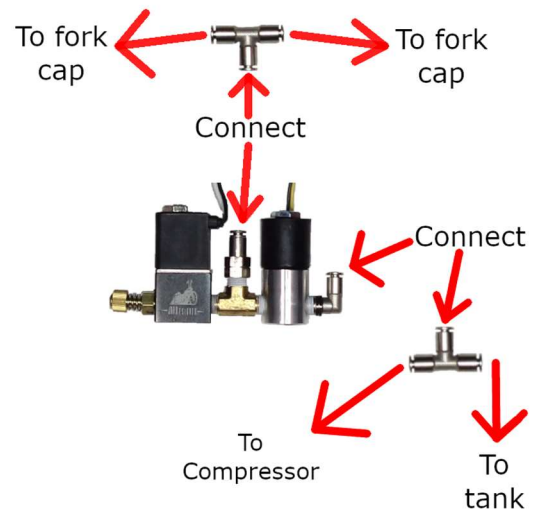


3. Connect the fill and dump valve wires to the Front Air Add-on Module per the below diagram.

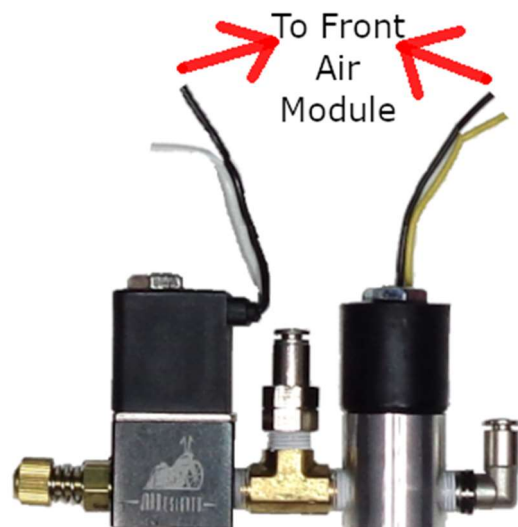

# Wiring

Terminal	Component	Color
1	Front Switch Power (+)*	Red
2	Front Switch Up	Yellow
3	Front Switch Down	White
4	Front Fill Valve Ground (-)	Black
5	Front Dump Valve Ground (-)	Black
6	Front Fill Valve Power (+)	Yellow
7	Front Dump Valve Power (+)	White
8	(empty)	

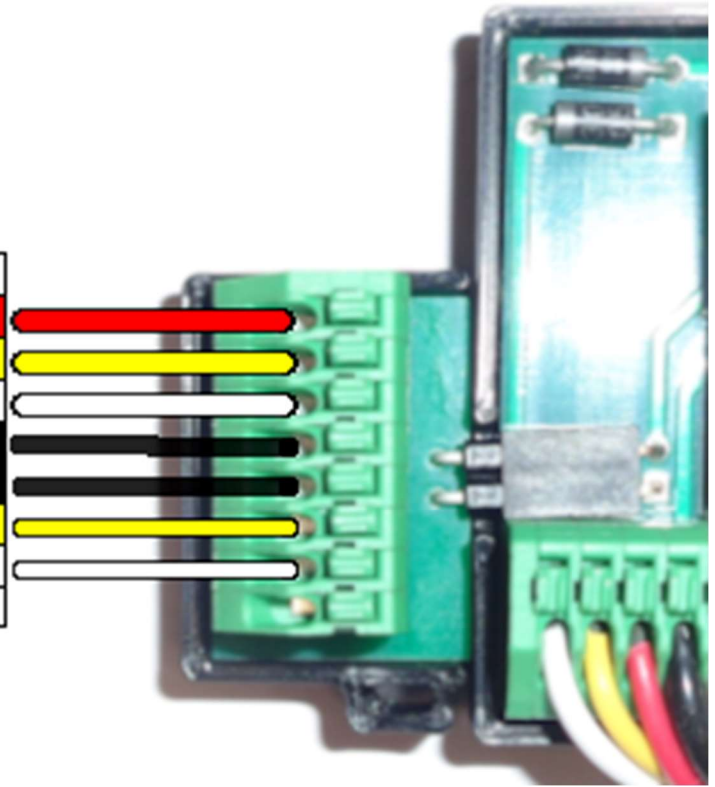

\*Empty if using keyed source

4. Adjust the speed control knob on the dump valve to control the drop rate when dumping air from the forks.

Speed control

