




Gen 3 Compressor Mount

Installation

1. Remove right side saddle bag.
2. Attach clamps to plate so that the countersunk side is on the same side as the pressed-in nuts.



3. Insert compressor into clamps, then tighten the mating bolts.

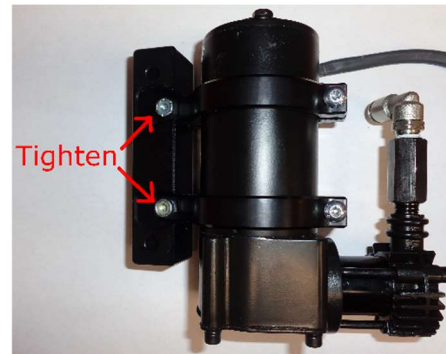

4. Bolt the mounting plate to the fender strut.



Overtightening will damage the compressor and void warranty!!!

This clamp does not require much torque to hold the compressor securely. Tighten to where the compressor cannot be rotated in the clamps by hand.

5. Ensure the position of the compressor clears the saddlebag and brake rotor, then tighten the clamp bolts.

