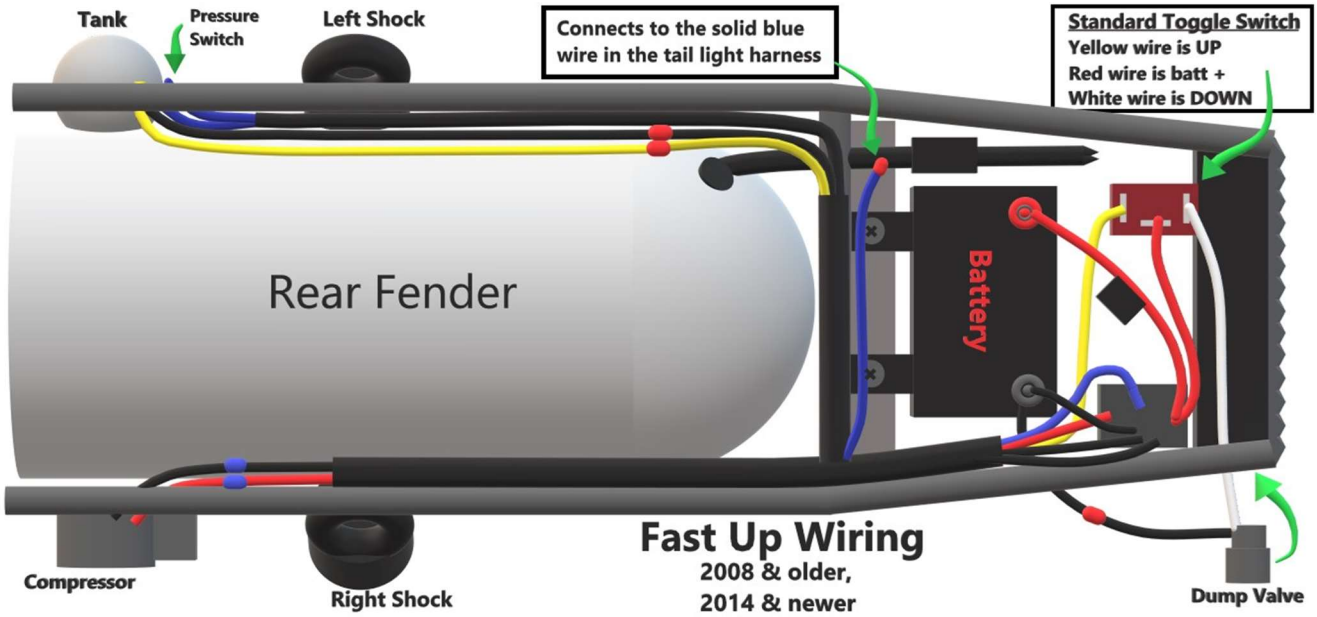

FAST UP WIRING HARNESS

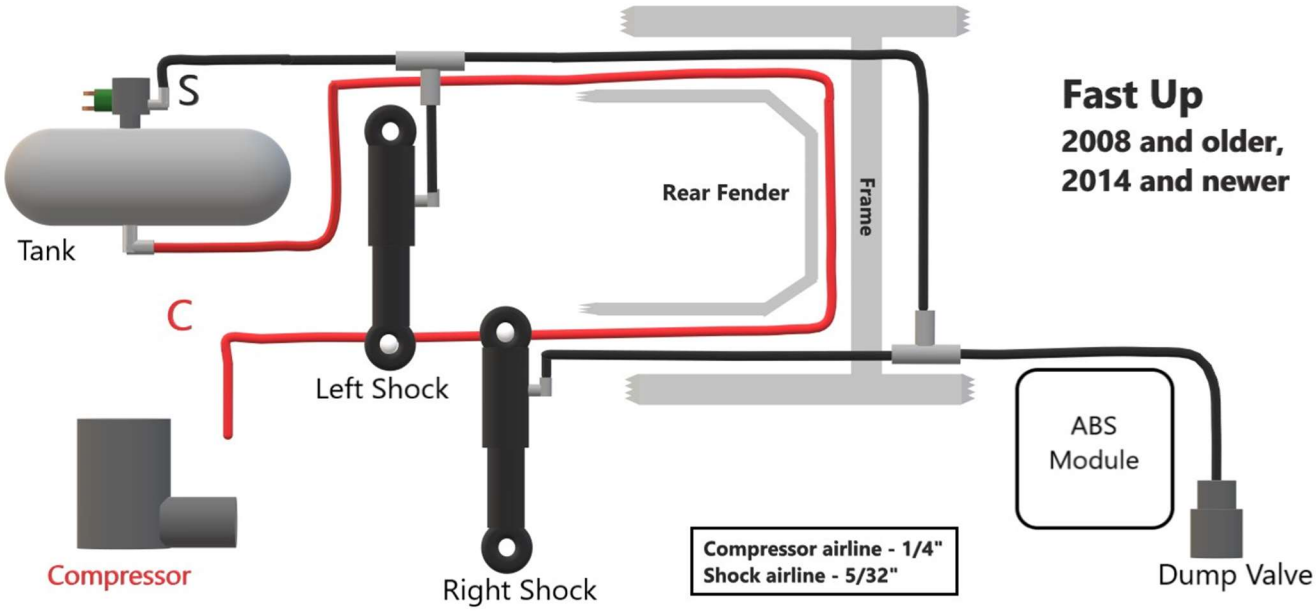

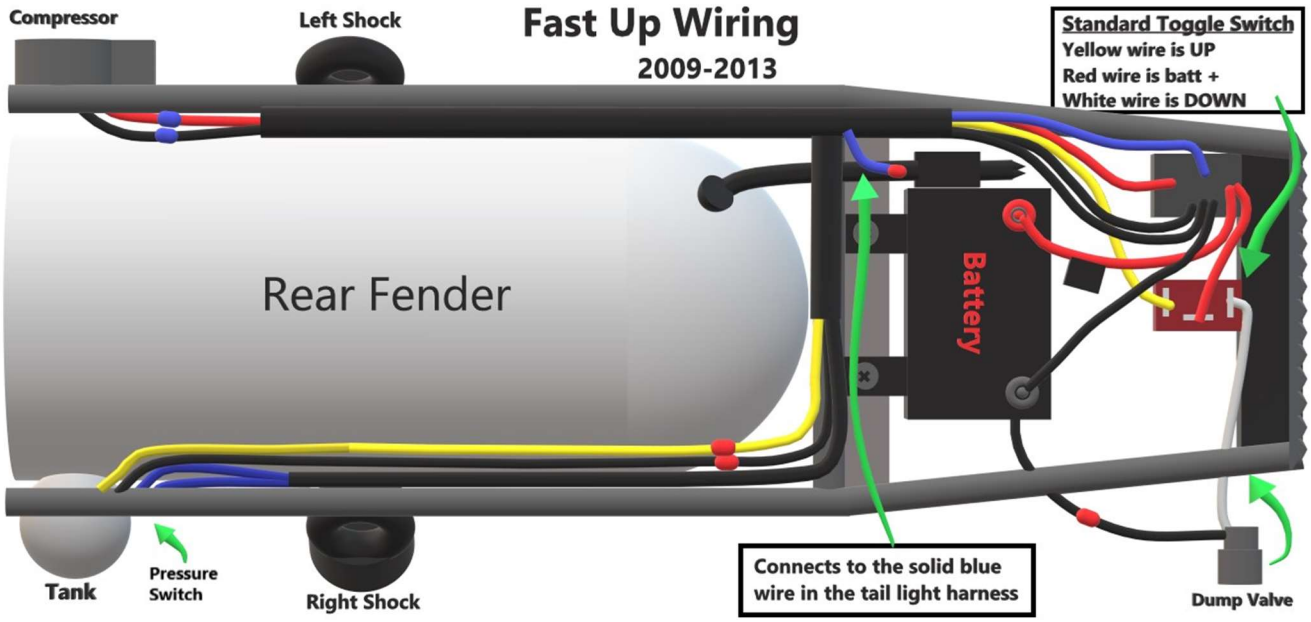
Fast Up Wiring
2009-2013
Compressor
Left Shock
Standard Toggle Switch
Yellow wire is UP
Red wire is batt +
White wire is DOWN
Rear Fender
Battery
Tank
Pressure Switch
Right Shock
Connects to the solid blue wire in the tail light harness
Dump Valve

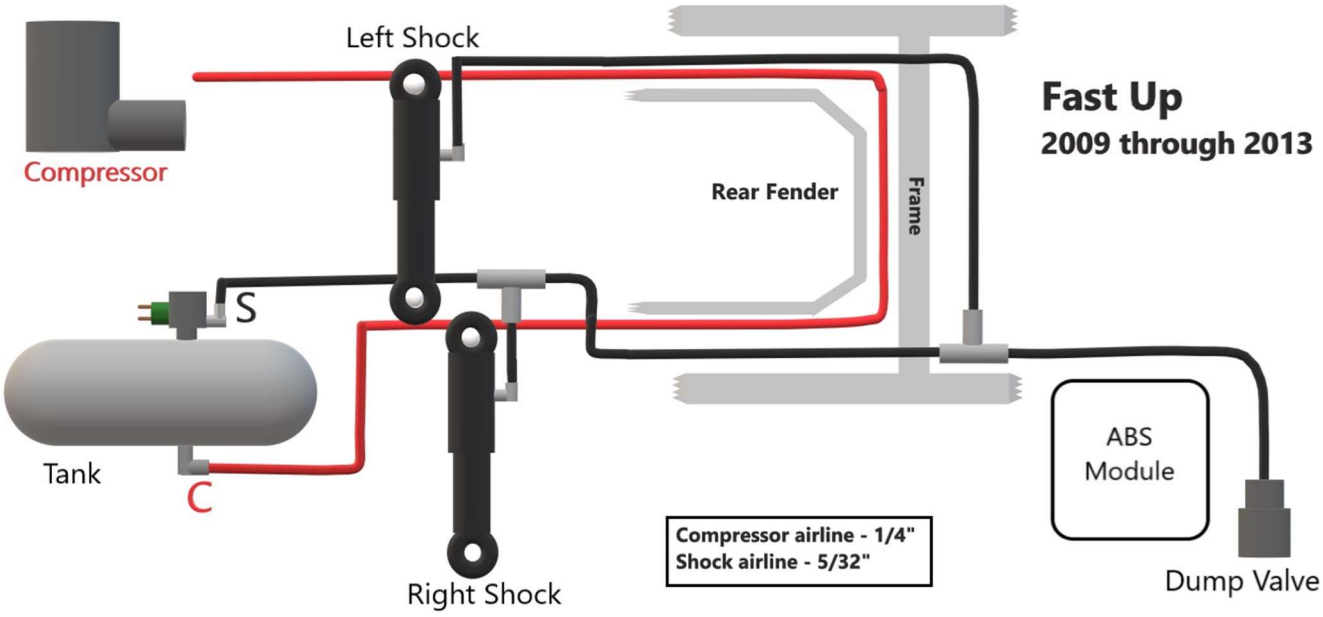
Fast Up
2009 through 2013
Left Shock
Compressor
Rear Fender
Frame
S
Tank
C
ABS Module
Compressor airline - 1/4"
Shock airline - 5/32"
Right Shock
Dump Valve